

AUTOCOM Trailer Tester - Fault codes

Fault code	Fault status	Display on the equipment	Remedy
FC00	Battery low/empty	<ul style="list-style-type: none"> - LCD - Fault LED "on" - Power LED "flashing" 	Charge case
FC01	Automatic safety shut-off! Internal temperature > 70°C	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Switch off case and allow to cool for at least 30 min
FC10	X2 + X3 connected simultaneously! Only connect 24V or 12V, not both at the same time!	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Disconnect X2 or X3
FC11	No mode available! No cable connection detected!	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Connect a cable to the corresponding case connection
FC12	No load detected at ignition (X1.2)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC13	Impermissible signal input detected in output mode!	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Please switch to the correct mode and/or check the wiring.
FC14	X1 + X3 connected simultaneously! Only connect 24V or 12V, not both at the same time!	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Connect a cable to the corresponding case connection
FC21	An input signal was detected at the brake light (X2.7) during signal output.	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC22	An input signal was detected at the left turn indicator (X2.1) during signal output.	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC23	An input signal was detected at the right turn indicator (X2.2) during signal output.	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC24	An input signal was detected at the left parking light (X2.5) during signal output.	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC25	An input signal was detected at the right parking light (X2.6) during signal output.	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC26	An input signal was detected at the reversing light (X2.8) during signal output.	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC27	An input signal was detected at the fog light (X2.3) during signal output.	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC28	Left/right turn indicator - difference in illumination found between the left-hand side and the right-hand side of the vehicle.	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC29	Left/right parking light - difference in illumination found between the left-hand side and the right-hand side of the vehicle.	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC31	Lamp failure - brake light (X2.7)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC32	Lamp failure - left turn indicator (X2.1)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC33	Lamp failure - right turn indicator (X2.2)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC34	Lamp failure - left parking light (X2.5)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC35	Lamp failure - right parking light (X2.6)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer

Fault code	Fault status	Display on the equipment	Remedy
FC36	Lamp failure - reversing light (X2.8)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC37	Lamp failure - fog light (X2.3)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC41	Short circuit - brake light (X2.7)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC42	Short circuit - left turn indicator (X2.1)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC43	Short circuit - right turn indicator (X2.2)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC44	Short circuit - left parking light (X2.5)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC45	Short circuit - right parking light (X2.6)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC46	Short circuit - reversing light (X2.8)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer
FC47	Short circuit - fog light (X2.3)	<ul style="list-style-type: none"> - LCD - Fault LED "on" 	Check wiring and lighting on trailer